5. Printed Circuit Board Diagram

5-1 MAIN(COMMON)

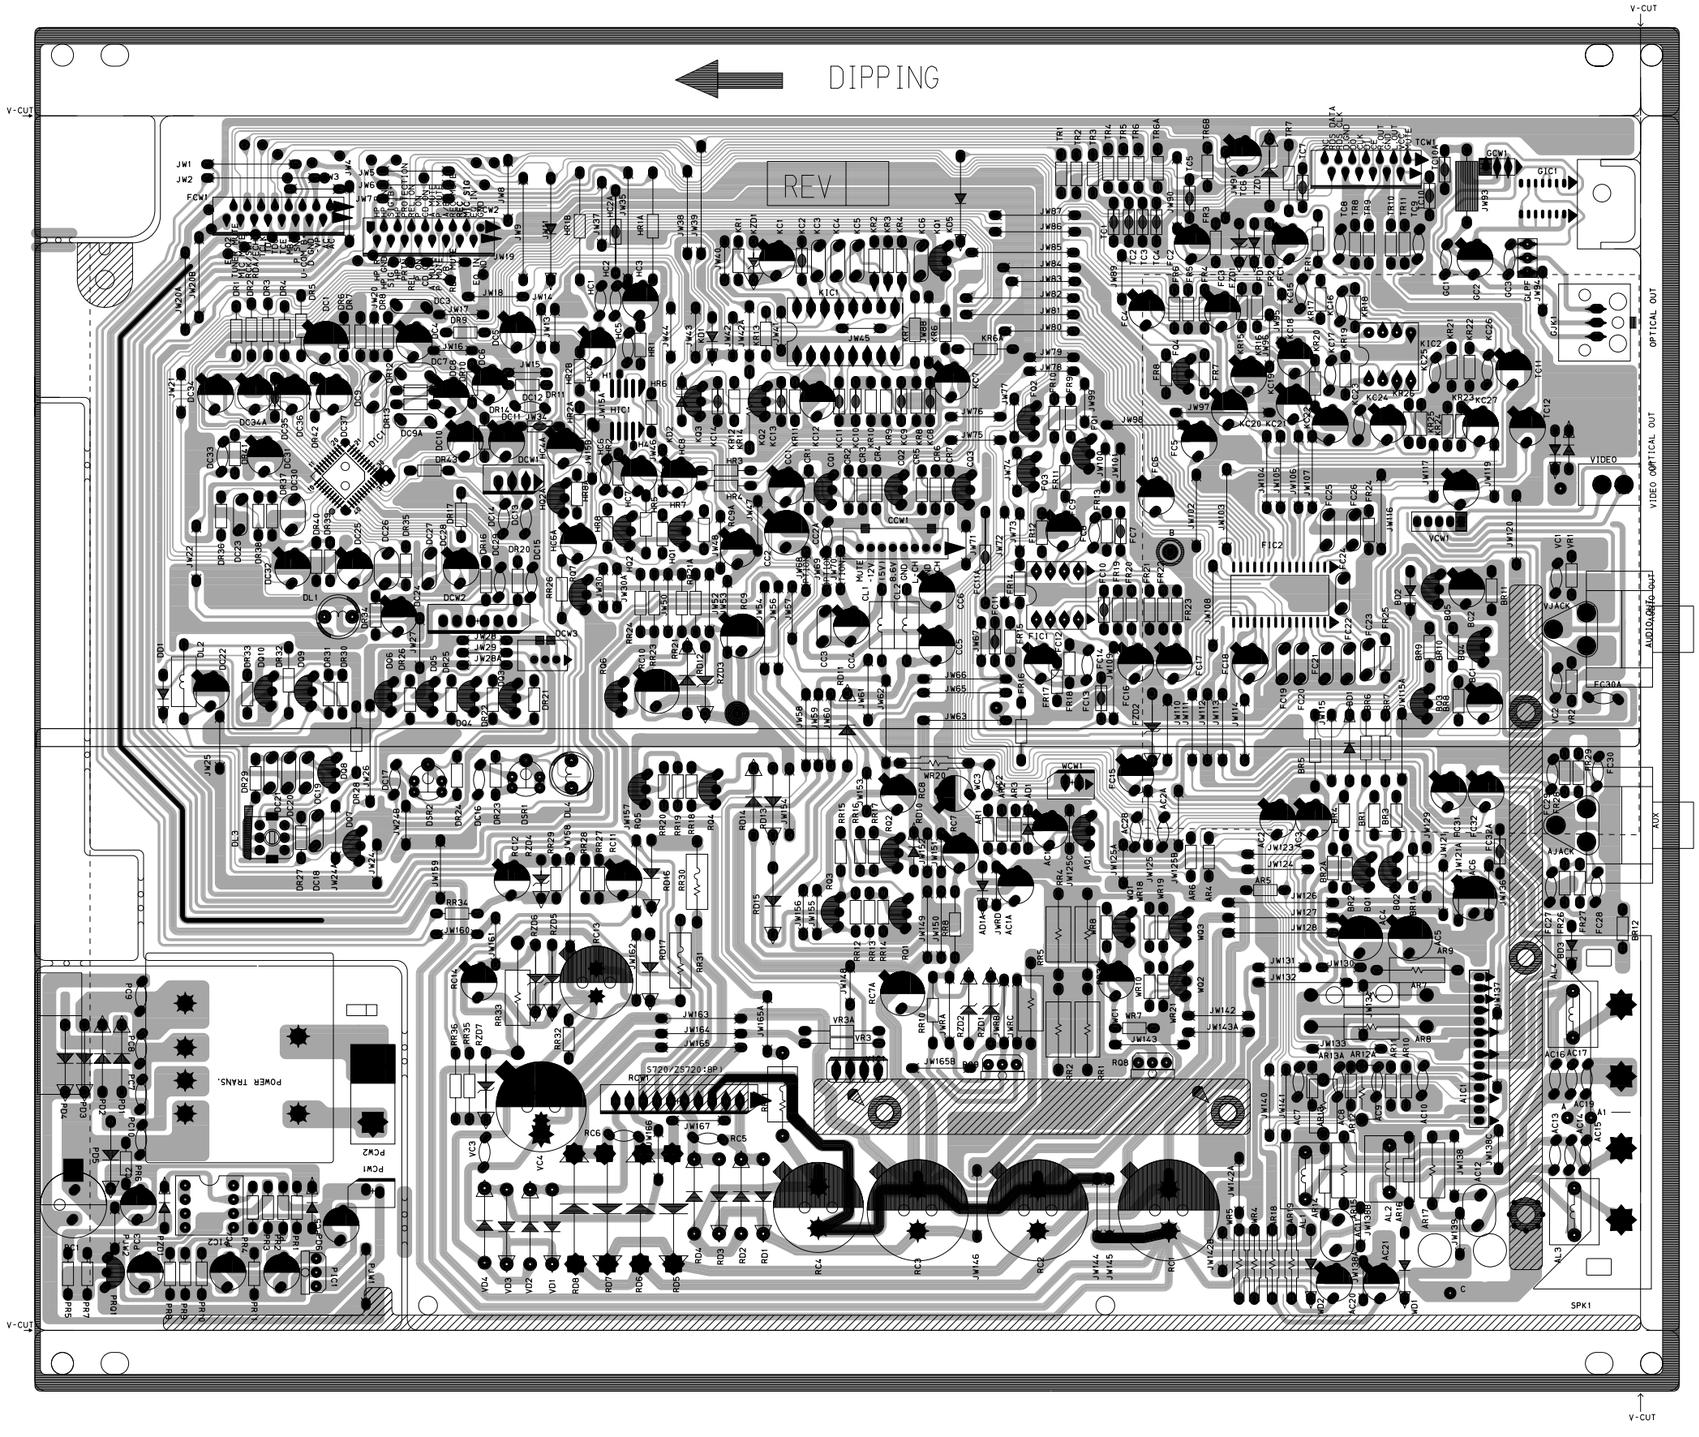

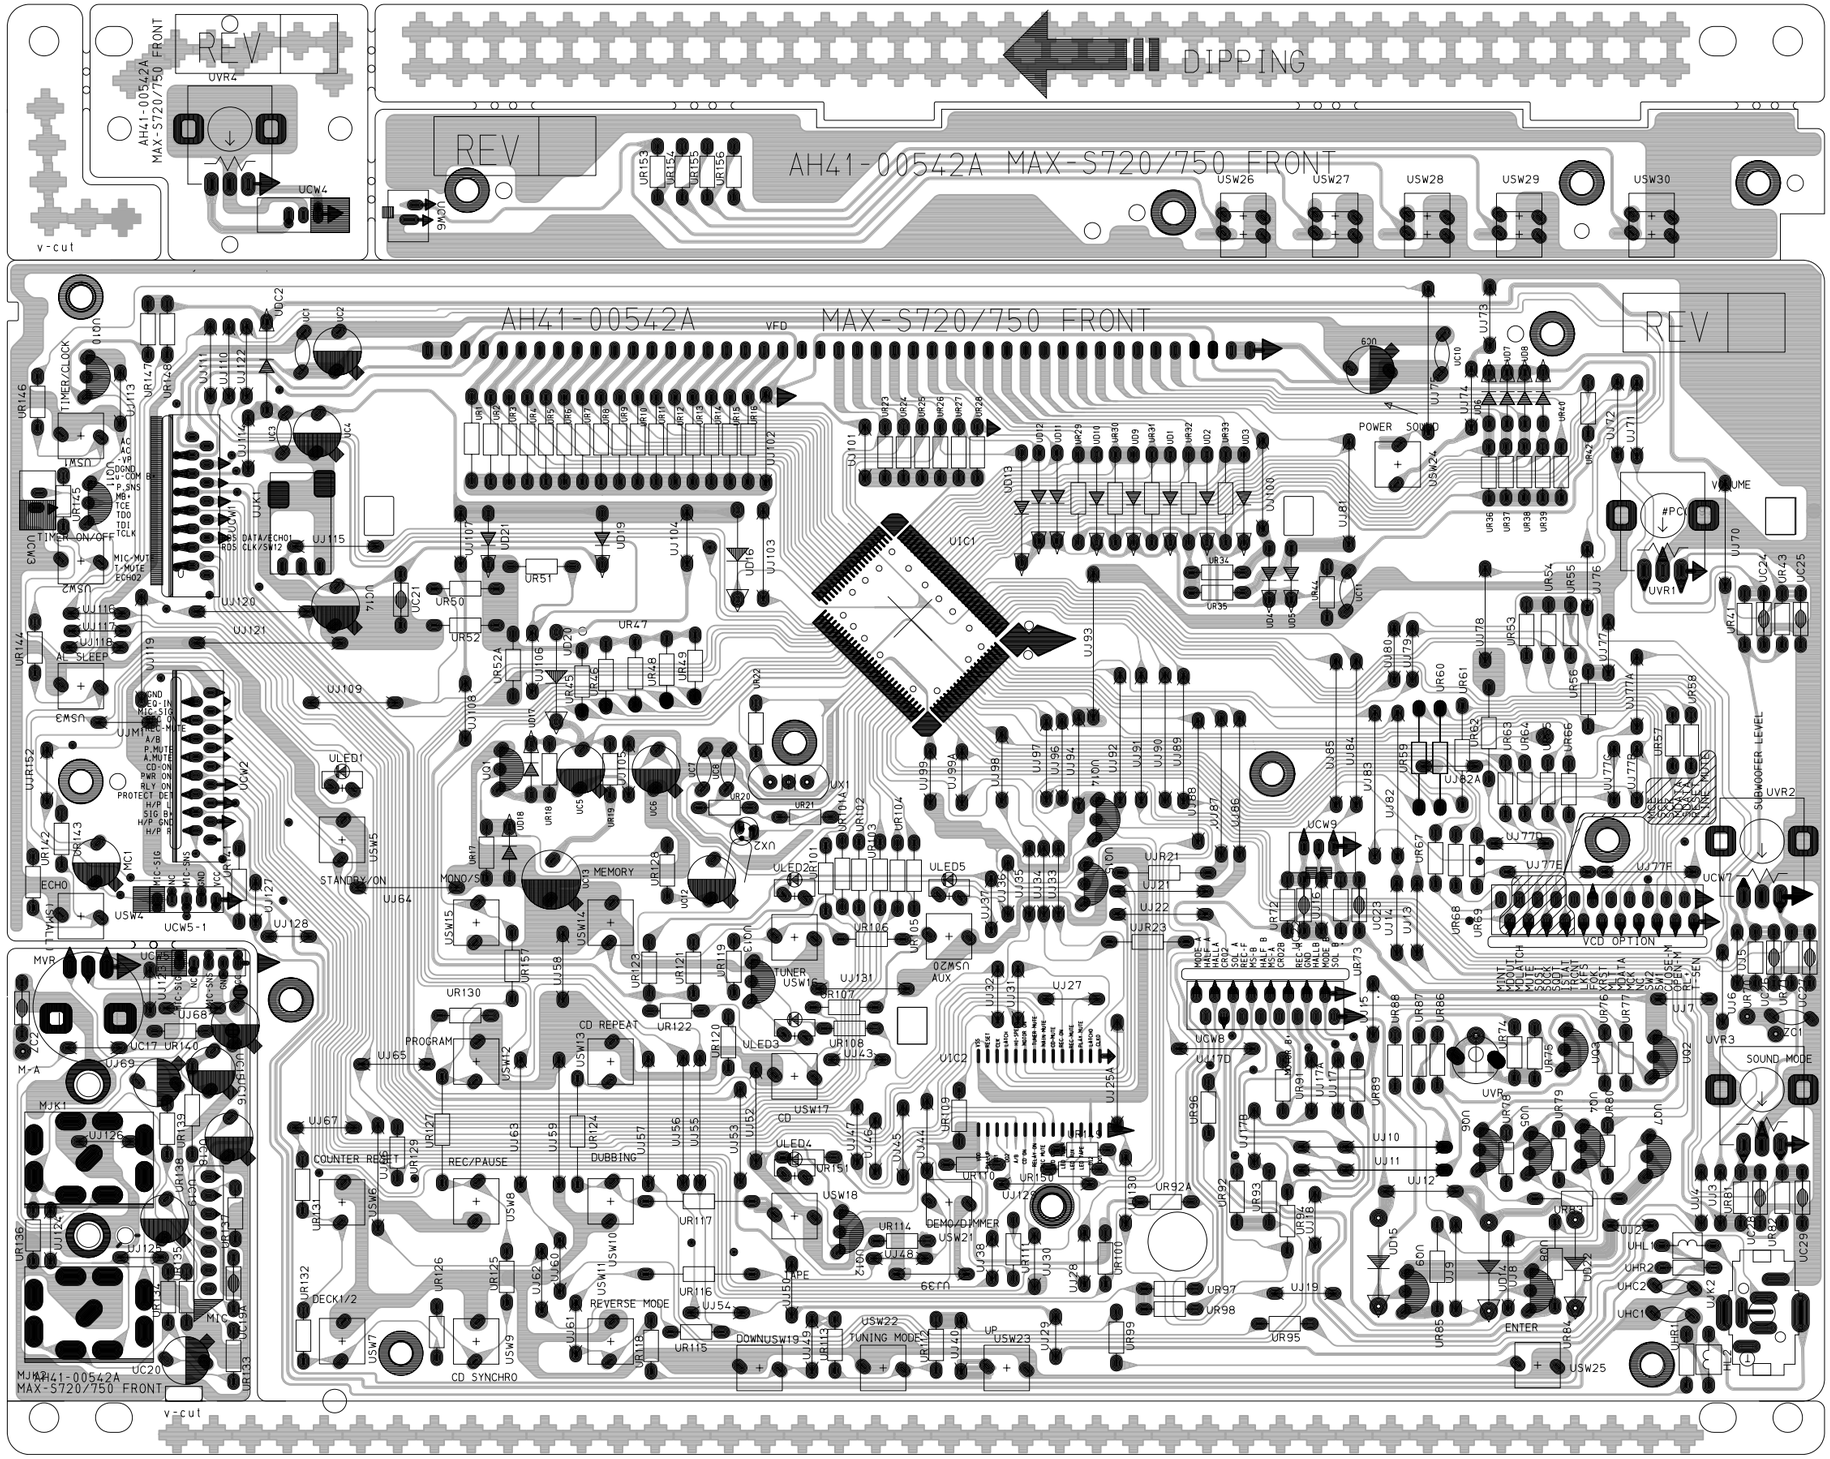
AH41-00542A MAX-S720/750 FRONT
REV
DIPPING
AH41-00542A MAX-S720/750 FRONT
REV
v-cut
AH41-00542A MAX-S720/750 FRONT
VFD
REV
POWER SOURCE
VOLUME
SOUND MODE
SUBWOOFER LEVEL
VCD OPTION
ENTER
TIMER/CLOCK
TIMER ON/OFF
AL SLEEP
ECHO
STANDBY/ON
MONO/ST
MEMORY
TUNER
AUX
CD REPEAT
PROGRAM
COUNTER RESET
REC/PAUSE
DUBBING
CD SYNCHRO
REVERSE MODE
TUNING MODE
DEMO/DIMMER
DECK1/2
MIC
AH41-00542A MAX-S720/750 FRONT
v-cut

5-3 TUNER(2BAND)

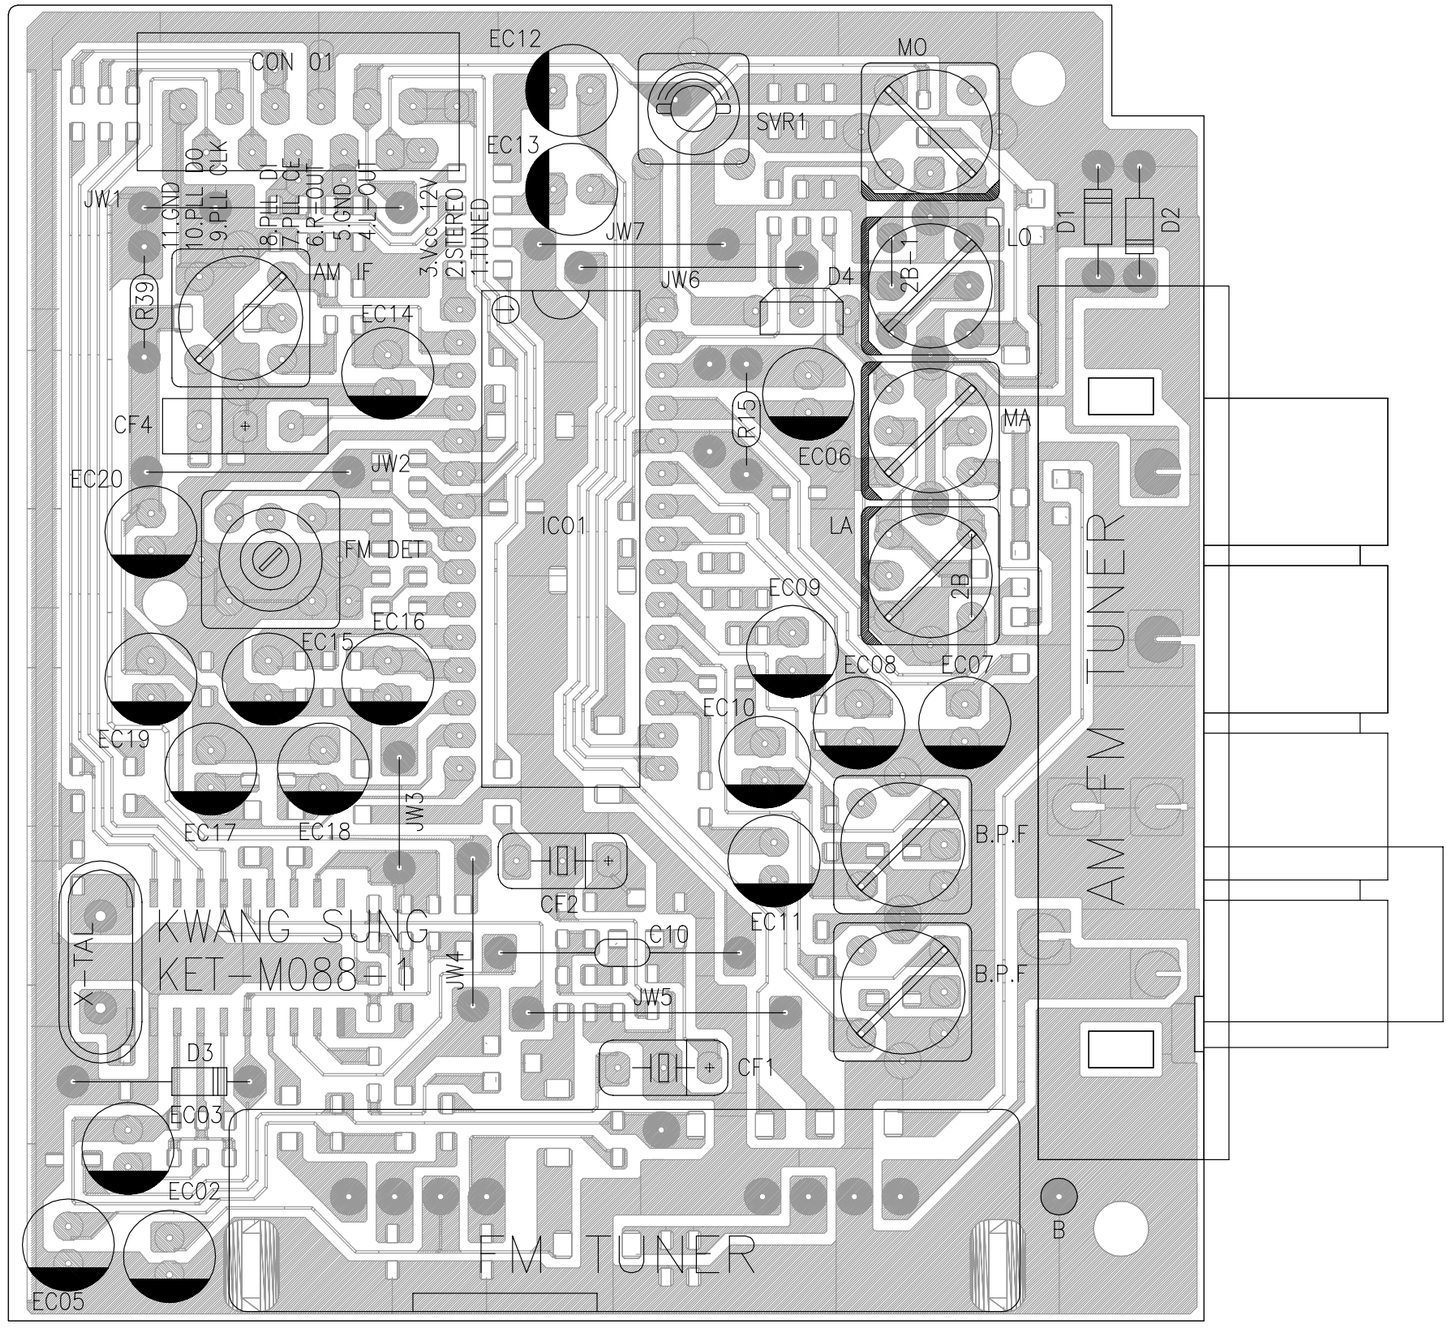

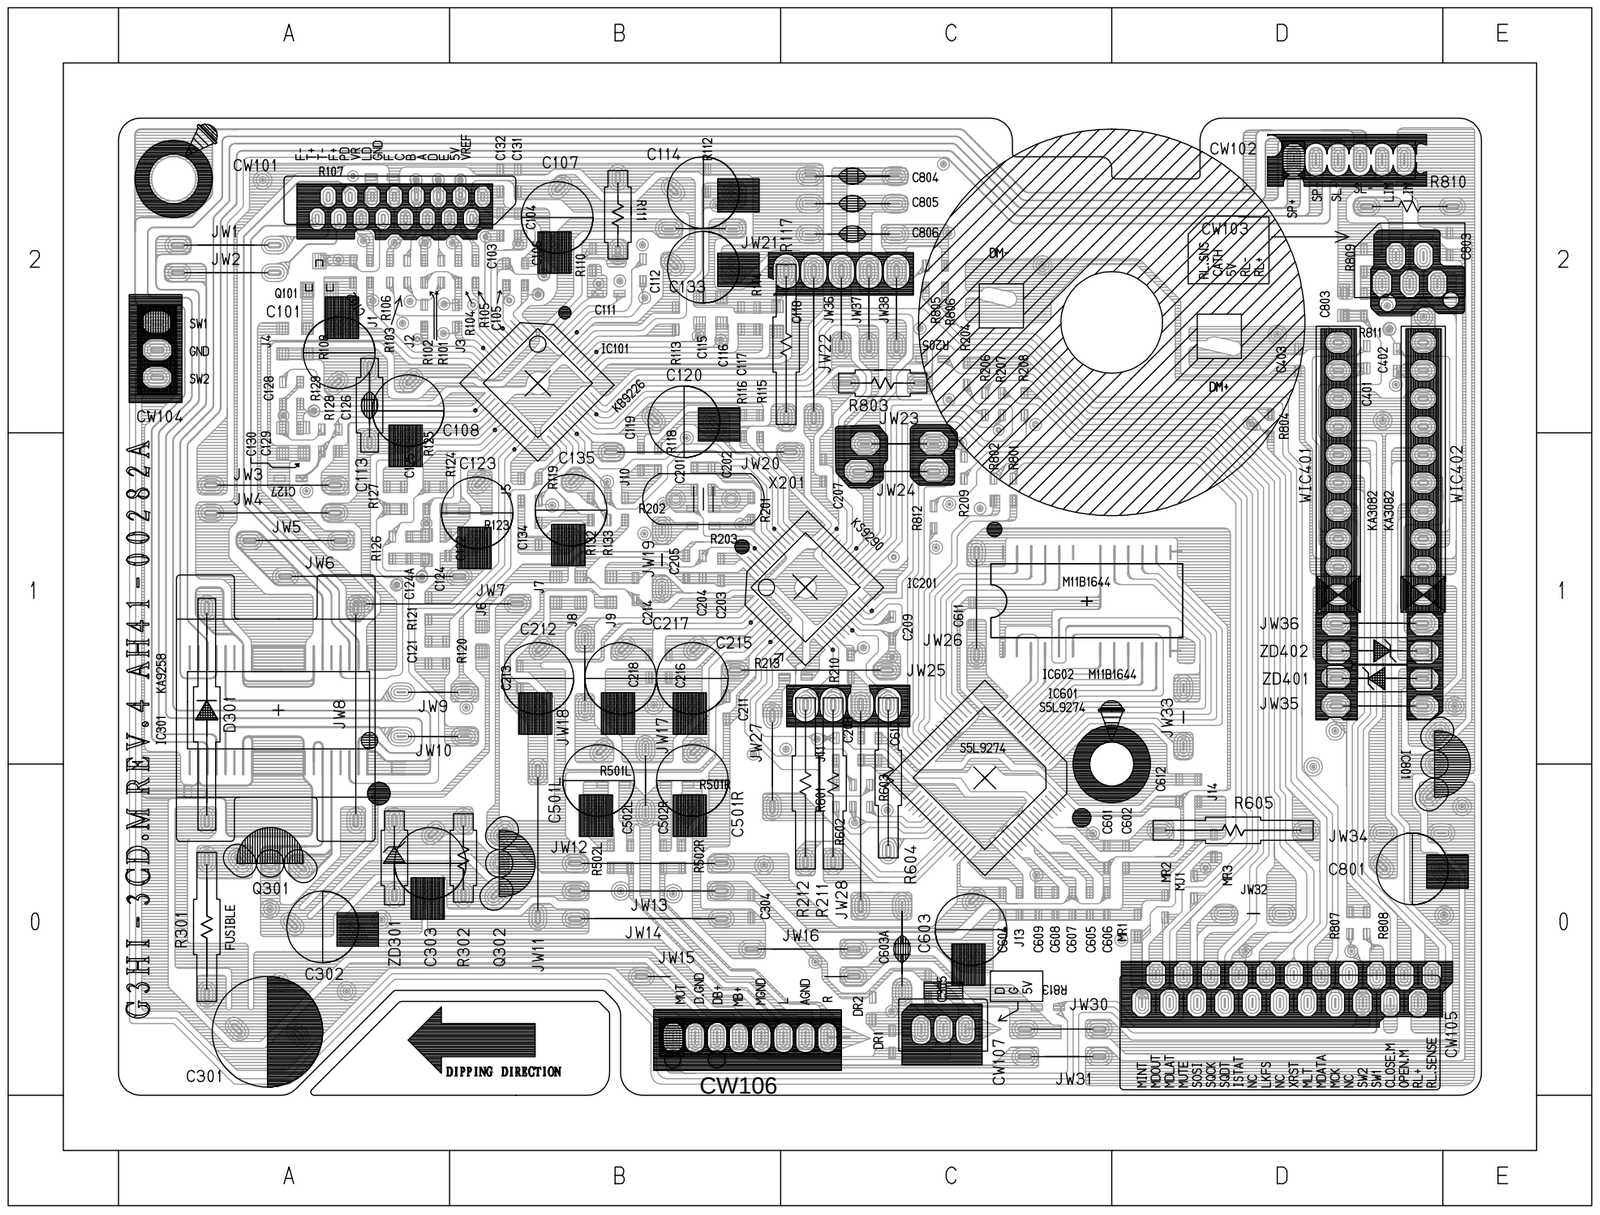

*** CONDENSER ***

C101 (A2)
C107 (B2)
C108 (A2)
C113 (A1)
C114 (B2)
C120 (B2)
C123 (B1)
C133 (B2)
C135 (B1)
C212 (B1)
C215 (B1)
C217 (B1)
C301 (A0)
C302 (A0)
C303 (A0)
C501L (B1)
C501R (B1)
C603 (C0)
C603A (C0)
C801 (D0)
C804 (C2)
C805 (C2)
C806 (C2)

*** TR ***

IC801 (D1)
Q301 (A0)
Q302 (B0)

*** DIODE ***

D301 (A1)
ZD401 (D1)
ZD402 (D1)

*** IC&WAFER ***

CW102 (D2)
CW104 (A2)
CW107 (C0)
WIC401 (D1)
WIC402 (D1)